

D-90500

TC-5 Operation Manual

Rev A



Table of Contents

Table of Contents	1
Notes	2
Preparing the Chamber for use	2
Conducting a Run-Up	3
Ascent	3
Descent	5
Prepare the Unit for Storage/Transport	6



Notes

Operating Voltage: 80-240V

The TC-5 Chamber is for **REFERENCE ONLY**. It **DOES NOT INCLUDE** a reference altimeter.

By testing altimeters with a known calibrated altimeter, any discrepancies in altitude will be seen.

Preparing the Chamber for use

- 1. Open pelican case.
- 2. Remove power cable from chamber & plug power lead into power jack. (Top left of unit)



3. Ensure **Descending Speed** & **Climbing Speed** dials are turned completely clockwise, this is the **Off** position.





4. Ensure <u>Descend Altitude</u> & <u>Climb Altitude</u> toggle switches are in the <u>Down/Off</u> position.



5. Switch **On** mains power. (Bottom left of unit)



Conducting a Run-Up

Ascent

1. Place altimeter/s into chamber & place the perspex top over the chamber opening.






• Ensure the rubber gasket built into the chamber rim is making full contact with the perspex top.



2. Move <u>Climb Altitude</u> toggle switch to **Up/On** position.

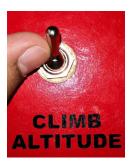

3. Turn **Climbing Speed** dial **anti-clockwise** 2 full turns.



4. Apply light pressure to **Left & Right sides** of the perspex top, till altitude in the chamber begins to rise.






5. Use <u>Climbing Speed</u> dial to adjust the rate of ascent. (Anti-Clockwise = Faster, Clockwise = Slower)




6. Once desired altitude has been reached, move <u>Climb Altitude</u> toggle switch to the **Down/Off** position. (This will hold the chamber at the desired altitude)

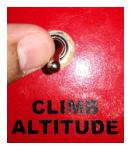


Descent

1. Move **Descend Altitude** toggle switch to the **Up/On** position.

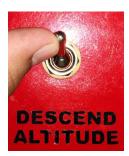




2. Turn <u>Descending Speed</u> dial **anti-clockwise** until desired descent speed is reached.

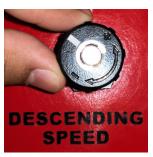

- Use the dial to control the rate of descent. (Anti-Clockwise = Faster, Clockwise = Slower)
- 3. Ensure that descent has completed, then move **Descend Altitude** toggle switch to the **Down/Off** position.

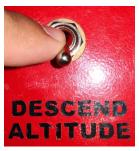

4. Remove perspex top & remove altimeter/s.

(If you are unable to remove the perspex top with ease, ensure that the vacuum in the chamber has completely equalised by turning the **Descending Speed** dial **anti-clockwise**.)

Prepare the Unit for Storage/Transport

1. Ensure the power switch is set to **Off**.





2. Coil up power cable & rest inside chamber opening.



3. Place the perspex top on chamber opening & close the pelican case.



4. Ensure both pelican case latches fully click shut.

